

## **OPERATION INSTRUCTIONS**

### **TO SWITCH OPERATION FROM UTILITY TO GENERATOR**

- 1) Turn all branch circuits to the “OFF” position
- 2) Turn main breaker to the “OFF” position
- 4) Connect and start generator
- 3) Slide *InterLock* plate
- 5) Turn generator breaker to the “ON” position
- 6) Turn on essential circuits one at a time

**WARNING:** Allow appliances to start before engaging next circuit  
Do not exceed rating of Generator.

### **TO RETURN TO UTILITY POWER REVERSE PROCEDURE**